

WE ARE NOW A STOCKING

KOHLER®

Sink & Faucet

DISTRIBUTOR



CAST IRON *Lifetime Limited Warranty*



WHITEHAVEN® 6489-0
OD: 35-11/16" x 21-9/16" x 9-5/8"
Apron Height: 8-13/16"
Undermount Single-Bowl
Farmhouse Kitchen Sink
Tall Apron



WHITEHAVEN® 6488-0
OD: 35-1/2" x 21-9/16" x 9-5/8"
Apron Height: 6-11/16"
Undermount Single-Bowl Side
Drain Short Apron Farmhouse
Kitchen Sink - Remodel Friendly



WHITEHAVEN® 6427-0
OD: 35-11/16" x 21-9/16" x 9-5/8"
Apron Height: 8-1/4"
Smart Divide® Undermount
Double-Bowl Large/Medium
Farmhouse Kitchen Sink Tall Apron

SEE FULL DIMENSIONS AT KOHLER.COM

NEOROC® *Lifetime Limited Warranty*



CAIRN® 8223-CM1
OD: 15-1/2" x 15-1/2" x 10-1/8"
Neoroc® Undermount Bar Sink
Includes Bottom Grid



CAIRN® 8199-CM1
OD: 33-1/2" x 18-5/16" x 10-1/8"
Neoroc® Undermount Double-Equal
Kitchen Sink, Includes 1 Bottom Grid



CAIRN® 29825-CM1
OD: 35-11/16" x 21-3/16" x 10-1/8" Apron Height: 8-5/16"
Neoroc® Undermount Single-Bowl Farmhouse Tall Apron
Kitchen Sink, Includes Bottom Grid & Towel Rack

▲ *Faceted Design*

SEE FULL DIMENSIONS AT KOHLER.COM

CLEANING TIPS FOR CAST IRON & NEOROC® SINKS:

- Kohler® Cast Iron: Squeeze Kohler® cast iron cleaner onto surface, wet cloth, or soft sponge. Never use an abrasive material such as a brush or scouring pad. Loosen the soil with a rubbing action. Rinse thoroughly with clean water. Repeat application if stain persists. For a bright shine, polish with a soft, dry cloth.
- Neoroc®: Apply Kohler® Neoroc® cleaner with a cloth. Use sparingly. Clean with one cloth and polish with another clean, dry cloth. Rinse thoroughly and use a soft cloth to wipe the product dry after each use.
- For unfamiliar surfaces test in a small, inconspicuous area first.
- Do not use steel wool, wire brushes or abrasive sponge pads. Use only non-scratch cleaning pads.
- Be careful not to leave dirty dishes, coffee grounds, tea bags or other staining material in contact with the enameled surface or Neoroc® surface for extended periods of time.
- Consider sink accessories such as bottom basin racks and rinse baskets to help protect the surface from scratches.

FOR CAST IRON RUST REMOVAL: Super Iron Out Rust Stain Remover and/or Bon Ami

FOR NEOROC® RUST REMOVAL: Super Iron Out Rust Stain Remover



TASK™ 80084-1PC-NA

OD: 33" x 22" x 9-1/2"

Top-Mount Single-Bowl Workstation Kitchen Sink
w/ Accessories: 2-Piece Colander Set, Bamboo
Cutting Board, Silicone Sinkmat, & Sink Strainer



VAULT™ 3942-1-NA

OD: 35-3/4" x 24-5/16" x 9-5/16"

Apron Height: 8-1/4"
Top-Mount Single-Bowl Stainless Steel
Farmhouse Kitchen Sink for 36" Cabinet

SEE FULL DIMENSIONS AT KOHLER.COM

CLEANING TIPS FOR STAINLESS STEEL SINKS:

- Apply Kohler® Stainless Steel cleaner with a cloth. Use sparingly. Clean with one cloth and polish with another clean, dry cloth.
- For unfamiliar surfaces test in a small, inconspicuous area first.
- Clean stainless steel at least once per week.
- Always apply stainless steel cleaner with a nonabrasive cloth or sponge, working with, not across, the grain.
- Do not use steel wool, wire brushes or abrasive sponge pads. Use only non-scratch cleaning pads.
- Do not use stainless steel cleaner on cooking utensils, such as pots, pans, knives or cutlery or on artificial stainless surfaces.
- Consider sink accessories such as bottom basin racks and rinse baskets to help protect the surface from scratches.

FOR STAINLESS STEEL RUST REMOVAL: Autosol Rust Remover and/or Bar Keepers Friend MORE Spray & Foam Cleaner



CRUE™ 22972-BL | 22972-CP

17-3/16" Height | 8-9/16" Reach

Pull-Down Single-Handle
Kitchen Faucet Matte Black
or Chrome Faucet
Escutcheon Plate Included
Features ProMotion®
& DockNetik® Technology
See Kohler.com for Details



HINT® 97060-4-CP

6-3/16" Height | 3-7/8" Reach

Single-Handle
Bathroom Sink Faucet
Drain Included



ELATE™ 99491-4-CP

6-9/16" Height | 4-3/16" Reach

Single-Handle Bathroom Sink
Faucet, Drain Included
Escutcheon Plate Available
to Order



PURIST™ 14406-4-CP

8-1/2" Height | 5-1/2" Reach

Widespread Bathroom Sink
Faucet w/ Low Lever Handles
& Low Gooseneck Spout
Drain Included

SEE FULL DIMENSIONS AT KOHLER.COM

CLEANING TIPS FOR FAUCETS:

- Hold the Kohler faucet cleaner 6-8" from the surface and spray the area. Wipe with a dry towel or cloth. For unfamiliar surfaces, test in a small, inconspicuous area first.